


## STEP 1

Put two base plates (B1) on the 6M screws.

Use two 30mm long screws on the sides and 20mm long screws in the middle.

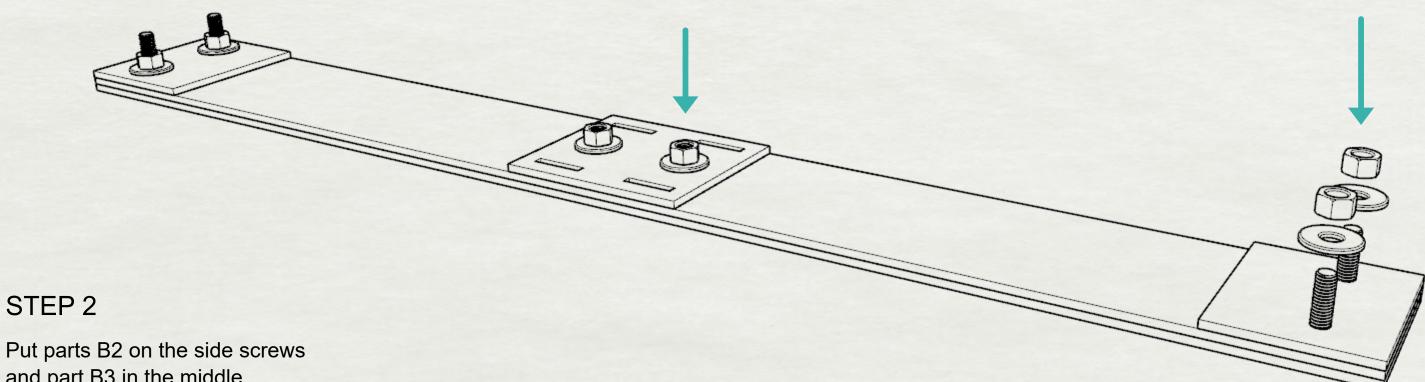

## STEP 2

and part B3 in the middle.

Put the washers on all the bolts and tighten the nuts on each one.

