


Analog sensor - quick and dirty

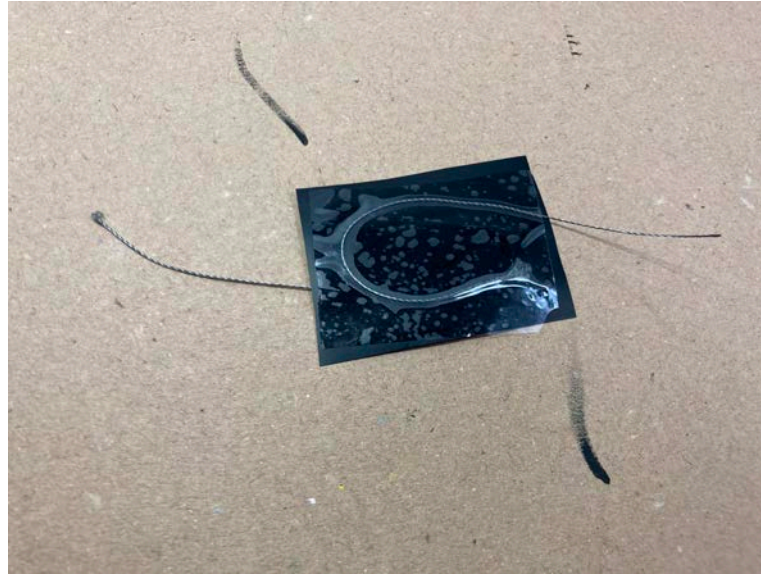

**Velostat
Tape
Conductive thread**

- Cut a piece of Velostat
- Attach on both side of the Velostat two pieces of conductive thread using tape.